# **Hosted Voice Cordless Phones**





### Turn the Handset ON / OFF

#### To turn ON the handset

Long press on **Power key** until the LCD screen lights up.

### To turn OFF the handset

Long press on **Power key** again when the handset is idle until the display turns off.

### Register the DP720 to DP750

- On DP750 Base station, press and hold the Radio/ Page button for 7 seconds until the radio icon starts blinking to start the subscription process. Or Access web UI and press **Subscribe** button to Open Subscription.
- On DP720, press Subscribe softkey if available on the main screen or access Menu → Settings → Registration → Register while the DP750 Radio icon is blinking.
  - **Note:** "Subscribe" softkey appears only if DP720 is not registered to any DP750 base station.
- 3. Select **BaseX** (X=1-4) corresponding to the desired base station DP750, then press **Subscribe**.
- 4. The DP720 will search for nearby base stations and will display the RFPI code and base station name of the discovered DP750.
- 5. Press **Subscribe** to pair with the displayed DP750.
- 6. The DP720 will display **Easy Pairing** on the LCD and play an audible buzz when successful. Then it will return to the home screen, displaying the handset name and number assigned by the registered base station.

### Make a Call

#### Method 1:

### Via default outgoing line:

- 1. Enter the desired number using the keypad.
- 2. Press **Dial key** or **Speaker key**. The handset will use the default outgoing line to dial out.
- 3. To terminate the call, press **Hang-Up key**

### Selecting the outgoing line:

- 1. Enter the desired number using the keypad.
- 2. Press the left softkey "Call".
- 3. Select the desired line to dial out.
- 4. To terminate the call, press **Hang-Up key** /s.

#### Method 2:

- 1. Press **Dial key** or **Speaker key** to enter the pre-dialing screen.
- 2. Enter the number to dial using the keypad or choose a contact from phonebook list.
- 3. Press **Dial key**, **#** (Use # as dial key" must be configured in web configuration) or wait for 4 seconds and the call will be initiated automatically.

### Answer Calls

When receiving an incoming call, you can answer the call using following steps:

#### Earpiece mode:

#### Speakerphone mode:

Press **Speaker Key** to pick up the call.

### **End Calls**

To terminate the calls, press **Hang-Up key** \( \sigma\_{\text{\circ}} \).

## Reject Calls

To reject an incoming calls, press **Hang-Up key** Or "Reject" softkey (right softkey \( \bullet \)).

### Mute the Microphone

Press the **Mute key** to switch off the microphone during an established call. You can now talk freely without the other party hearing you and the icon of mute will be displayed on the screen.

Press **Mute key** again to switch the microphone back on.

### Adjust Speaker and Earpiece Volume

Press left key ( or right key ) while you are on an established call to set the volume of the earphone / speaker. You can choose between 5 different levels.

### Call Transfer

The DP720 supports two call transfer types:

### Blind transfer and Attended transfer

#### **Blind Transfer**

- 1. Press the "**Options**" softkey (Left softkey) during a call, and then select **Transfer**.
- 2. The initial call will be on hold, enter the number or select the handset you want to transfer the call to.
- 3. Press **Dial key** . The call is connected to the number or the handset you specified, and the LCD screen prompts **Call Transferred**.

### **Attended Transfer**

- 1. Press Left softkey "**Options**" during a call, and then select **New call**.
- 2. Choose the line and enter the number you want to transfer the call to, then press **Dial key** .
- 3. Once the second call is established, press left softkey "**Option**" and select **Transfer**.

### Call Forward

To forward calls dial \*72 + 10 digit number and then press **Dial Key**  $\bigcirc$ .

To disable forwarding calls dial \*73 and then press **Dial Key**  $\bigcirc$  .

### 3-Way Conference

The DP720 supports creating a local conference with other parties (including handset starting the conference).

### To start a 3 Way conference, follow below steps:

- 1. Press the **Dial key** to place a call to the first party.
- 2. Press left softkey "Options" , then select **Conference.**
- 3. Enter the number of the second party you want to add to the conference and press **Dial Key** .
- 4. To drop the conference call, press or "End" softkey.

**Note:** Conference can be bridged before third party answers.

### Transfer Calls Between Handsets

The DP720 supports transferring calls between handsets on the same base station.

- 1. While on a call select Options soft key.
- 2. Select Attended Transfer which will put call on hold.
- 3. Select handset you wish to transfer and press Call soft key.
- 4. Once call is answered, select Transfer soft key to send call destination handset.

### Voicemail

To call your voicemail you can press and hold 1 on your handset or dial \*99.

Initial voicemail pin will be the last 4 digits of the handset number.

# Mute as DND (Do Not Disturb)

Pressing mute key on idle state will Enable/Disable DND mode on the phone. If enabled the phone will show on display. (Default is Disabled)

### To disable Mute as DND option

Go to Preferences and highlight Mute as DND. Change from Enabled to Disabled using right or left soft key, then press Save soft key.